




DYNASTY **SPAS**®

## SPA CONTROL ICONS

AC	AC ..... Air Controls
NJ	NJ ..... Neck Jets
O/O	O/N ..... Water Feature
z#	(S) ..... Zone
P1	(P1) ..... Pump 1
P2	(P2) ..... Pump 2



# SPA CONTROLS ... TRANQUILITY HARBOR

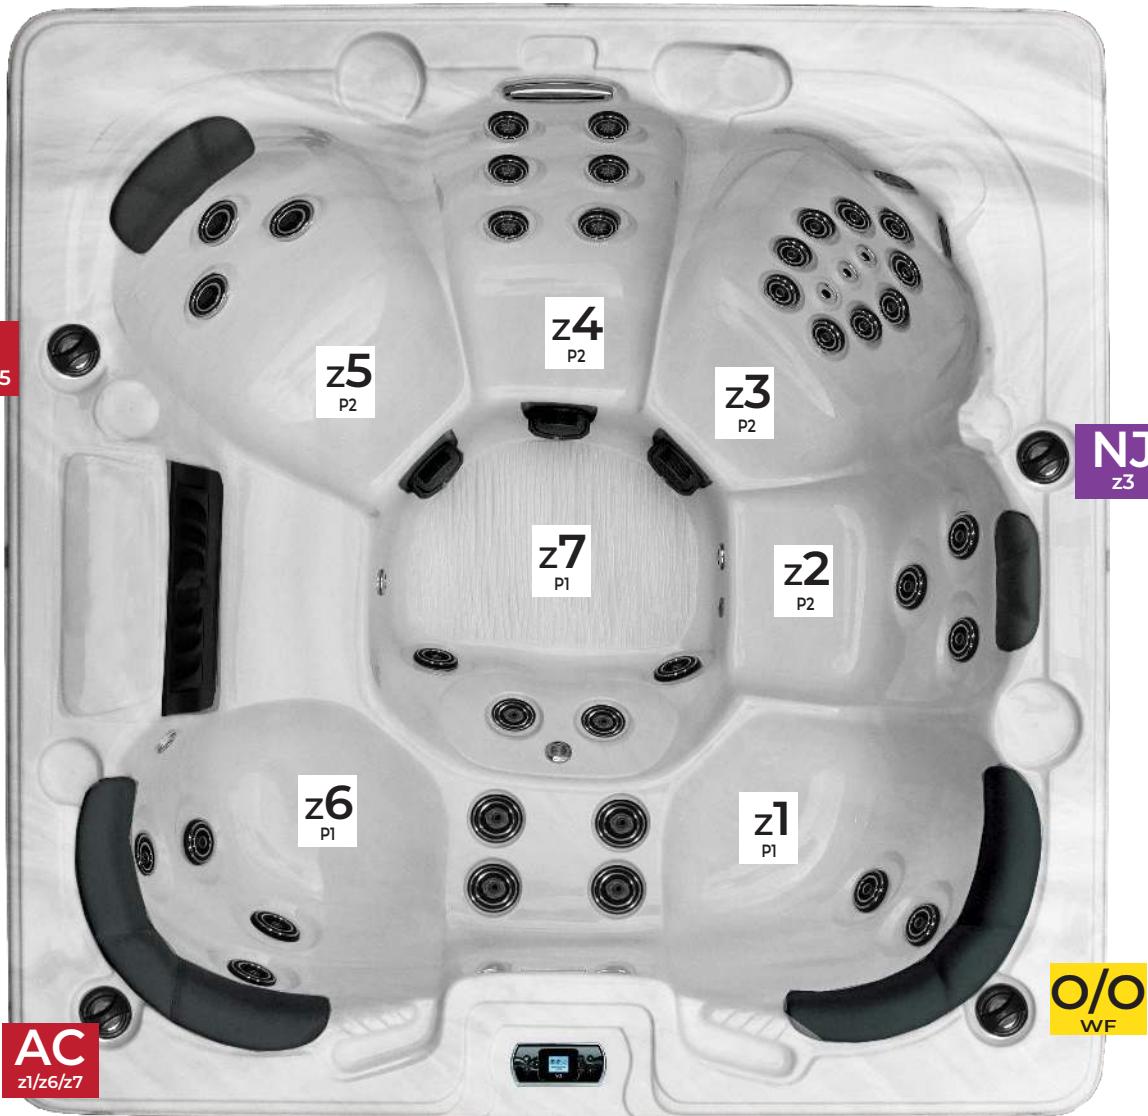

## Operation Notes: TRANQUILITY HARBOR

**\*DO NOT TURN 2-WAY DIVERTER VALVES WHILE RELATED PUMP IS OPERATING.**

NOTE: MOST JETS CAN BE OPENED OR CLOSED BY TURNING THEM.

## HELPFUL TIPS

Suction outlet components have a finite life. The cover/grate should be inspected frequently and replace at least every seven years, or if found to be damaged, broken, cracked, missing, or not securely attached.